


Depois de descarregar o ficheiro da impressora, copiar para o Disco C do servidor e executar. Será criada uma pasta HP após o unzip do ficheiro executável, que irá extrair todos esses ficheiros para a nova pasta.

Temos assim as drivers da impressora instaladas no disco C do Servidor


Name	Date modified	Type	Size
HP Universal Print Driver	02/02/2022 18:48	File folder	
PerfLogs	18/01/2022 11:12	File folder	
Program Files	16/01/2022 16:48	File folder	
Program Files (x86)	16/01/2022 16:42	File folder	
Users	16/01/2022 16:41	File folder	
Windows	18/01/2022 11:13	File folder	
hp upd-pcl6-x64-7.0.1.24923	02/02/2022 17:56	Application	21 167 KB

Configurações do servidor:


Para colocar todos os elementos necessários, Add Roles and Features

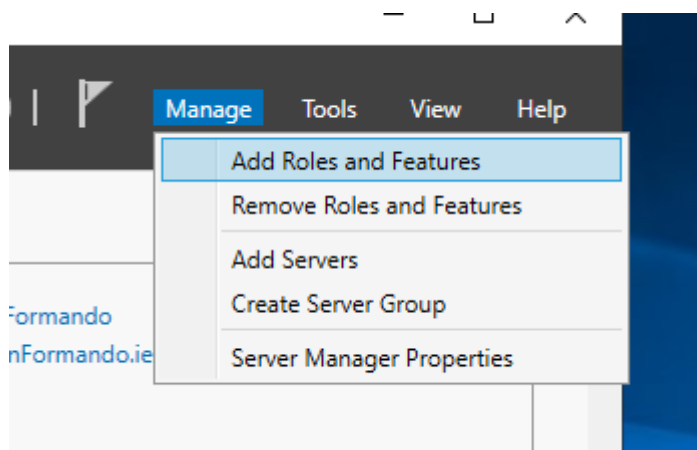


Seguir o assistente e em Server Roles seleccionar Print and Document Services

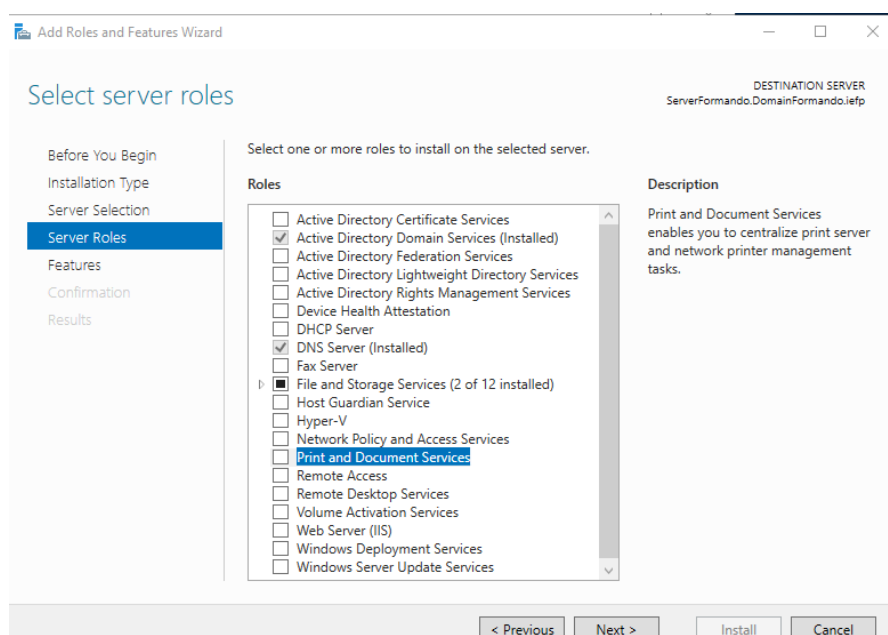


Ferramenta para instalar todos os serviços, Add Features:

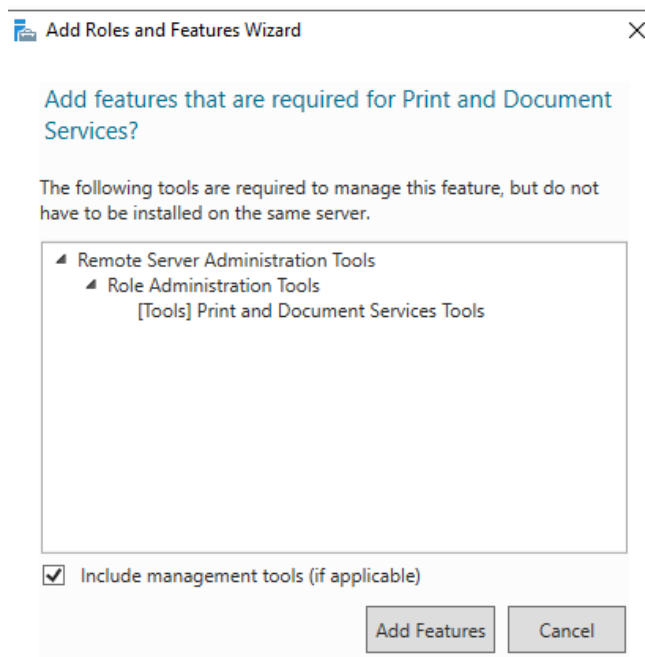

Continuar no assistente até ao fim, selecionar Restart server, Yes e Install

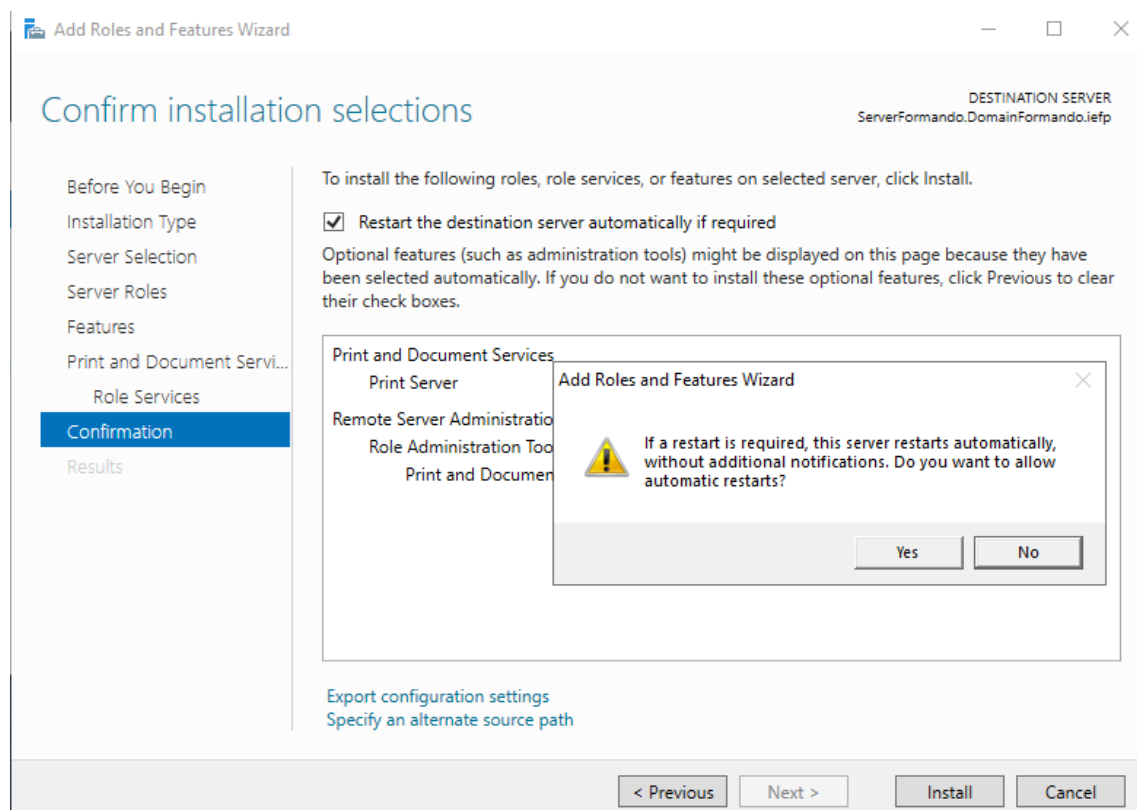


Para concluir o procedimento, Tools, Print Management

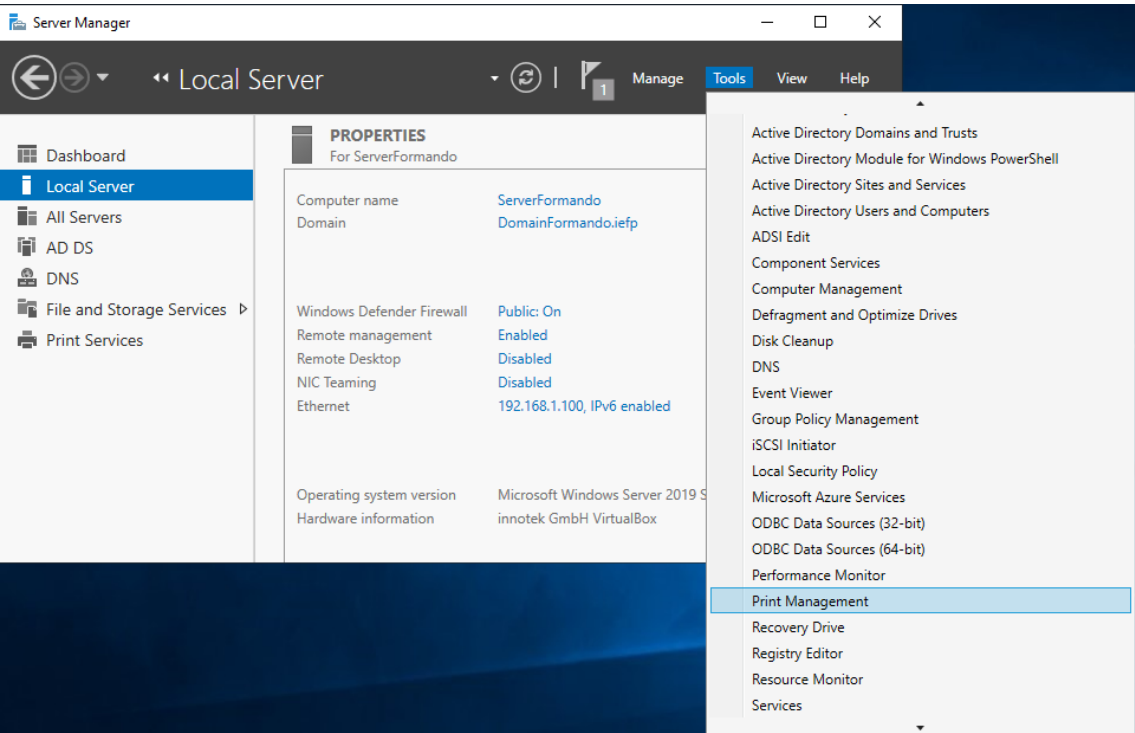


Temos que agora configurar 3 elementos do Print Servers, ServerFormando: Drivers, Ports e Printers.


Começamos pelas Ports

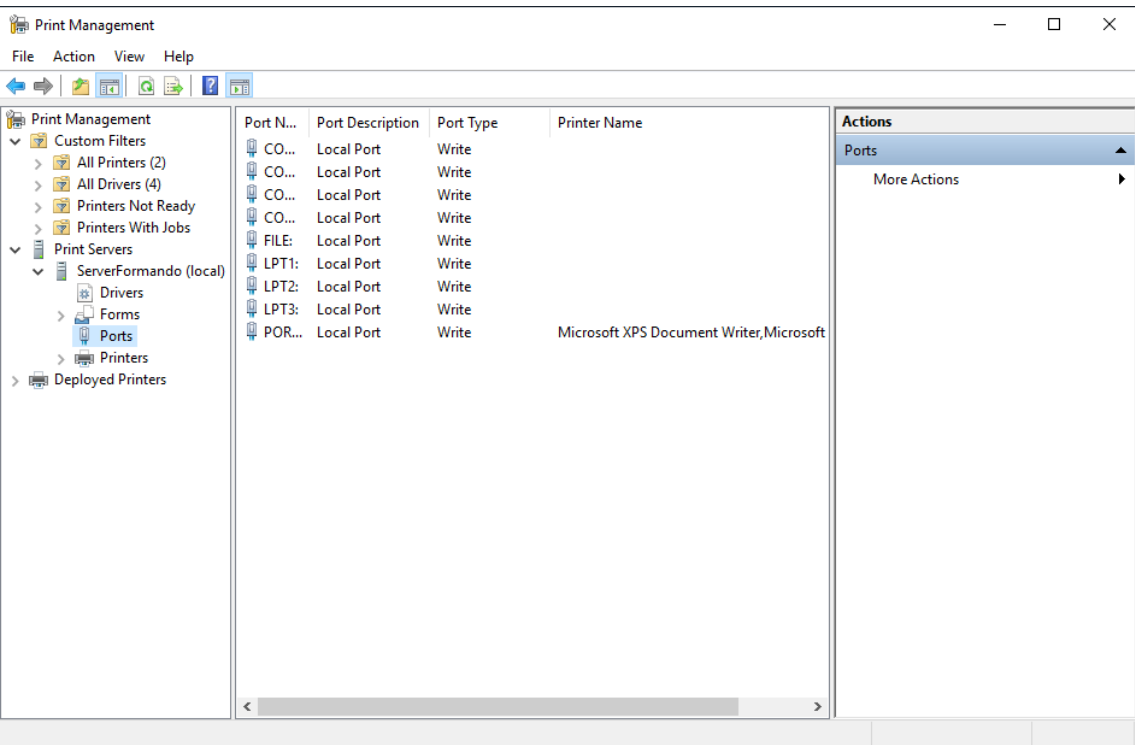


Como queremos trabalhar com a impressora em rede, temos que adicionar uma porta para a entrada de rede da impressora:

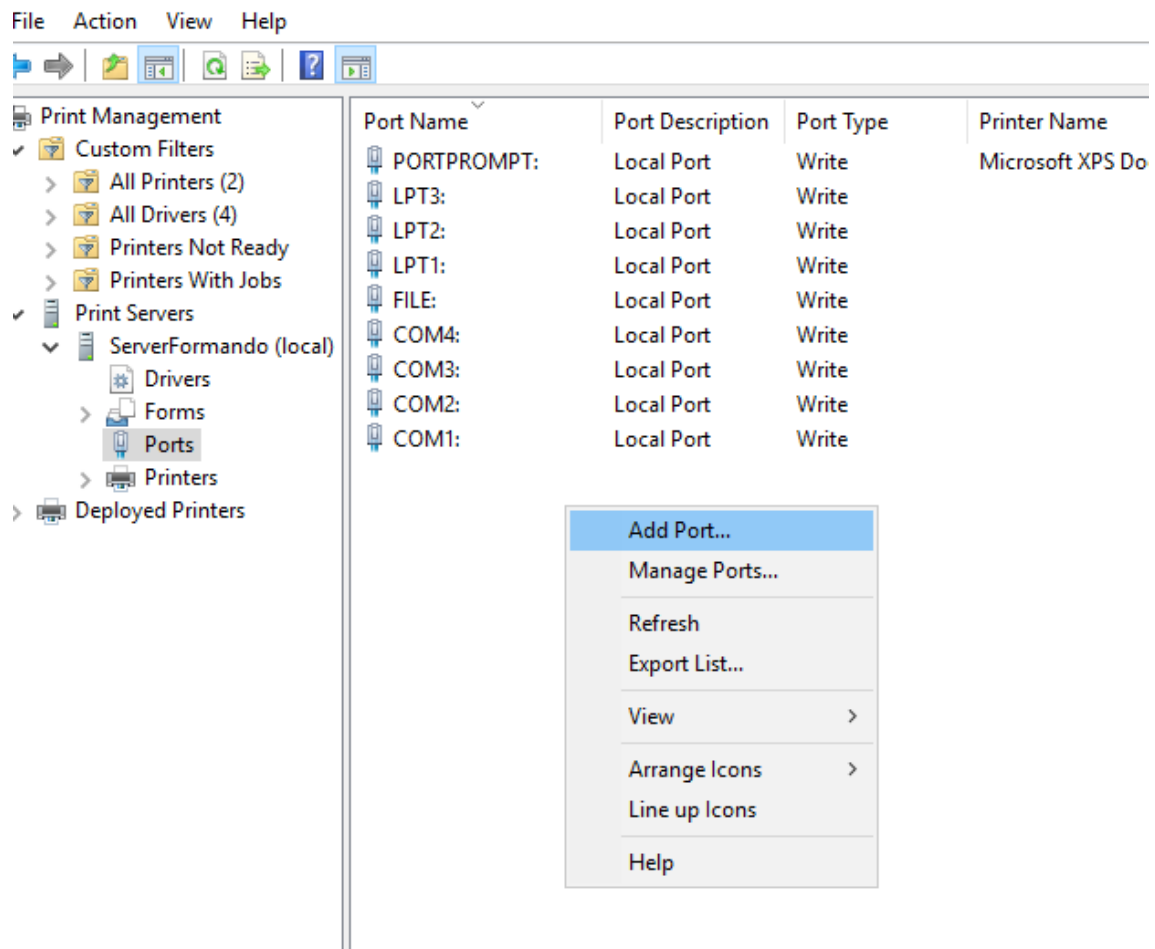


Selecionar TCP/IP e New Port...

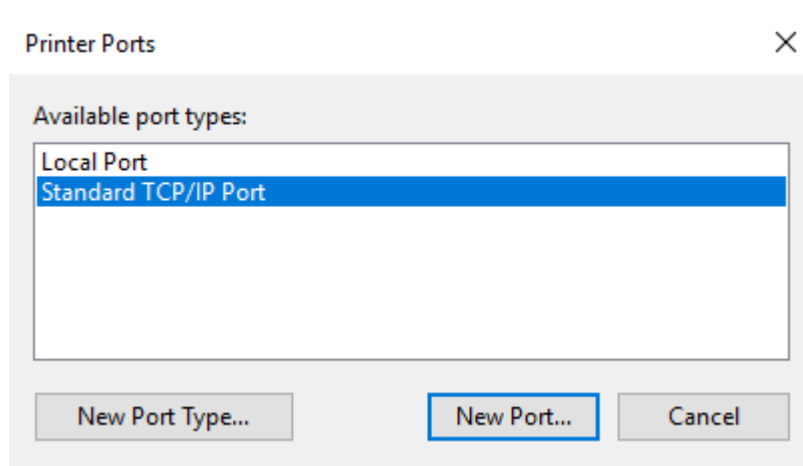

Seguir assistente:

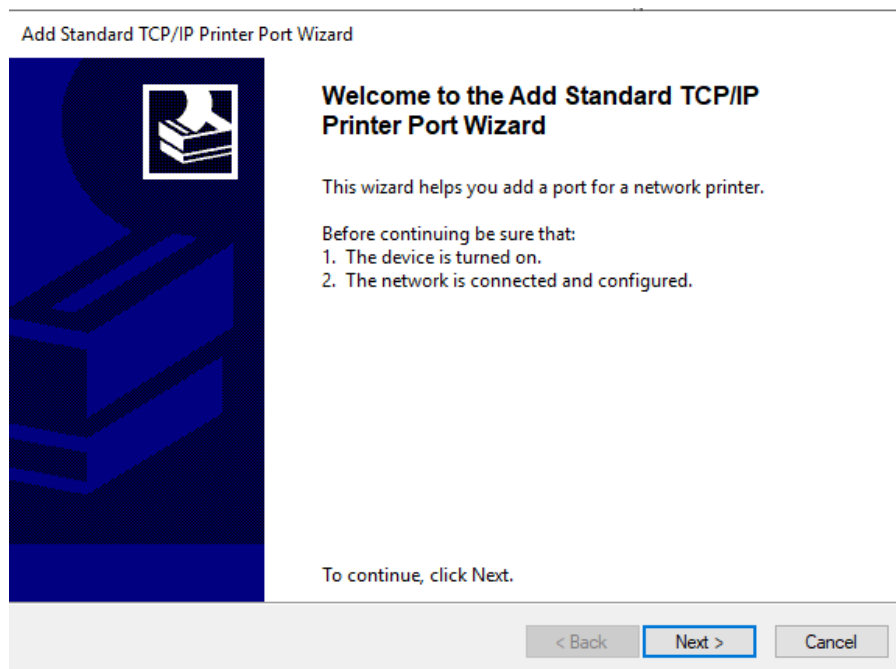

Colocar endereço IP que ainda não exista na rede, Next:

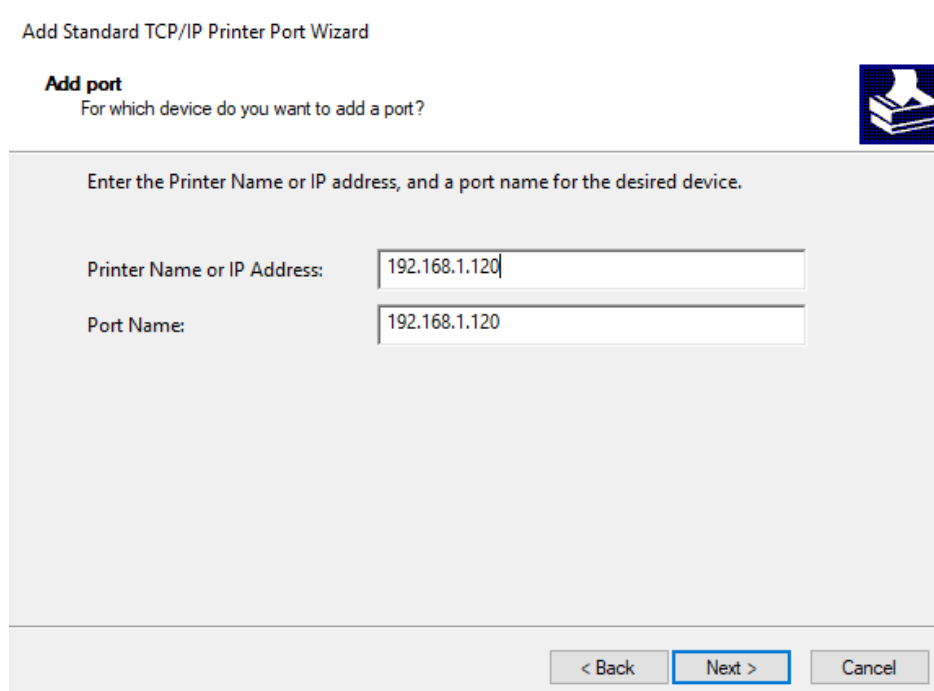

Escolher porta de rede genérica:

Add Standard TCP/IP Printer Port Wizard

Additional port information required

The device could not be identified.



The device is not found on the network. Be sure that:

1. The device is turned on.
2. The network is connected.
3. The device is properly configured.
4. The address on the previous page is correct.

If you think the address is not correct, click Back to return to the previous page. Then correct the address and perform another search on the network. If you are sure the address is correct, select the device type below.

Device Type

☒ Standard

Generic Network Card

☐ Custom

Settings...

< Back

Next >

Cancel

Finish:

Add Standard TCP/IP Printer Port Wizard



Completing the Add Standard TCP/IP Printer Port Wizard

You have selected a port with the following characteristics.

SNMP:	No
Protocol:	RAW, Port 9100
Device:	192.168.1.120
Port Name:	192.168.1.120
Adapter Type:	Generic Network Card


To complete this wizard, click Finish.

< Back


Finish

Cancel


A porta da impressora fica assim configurada:

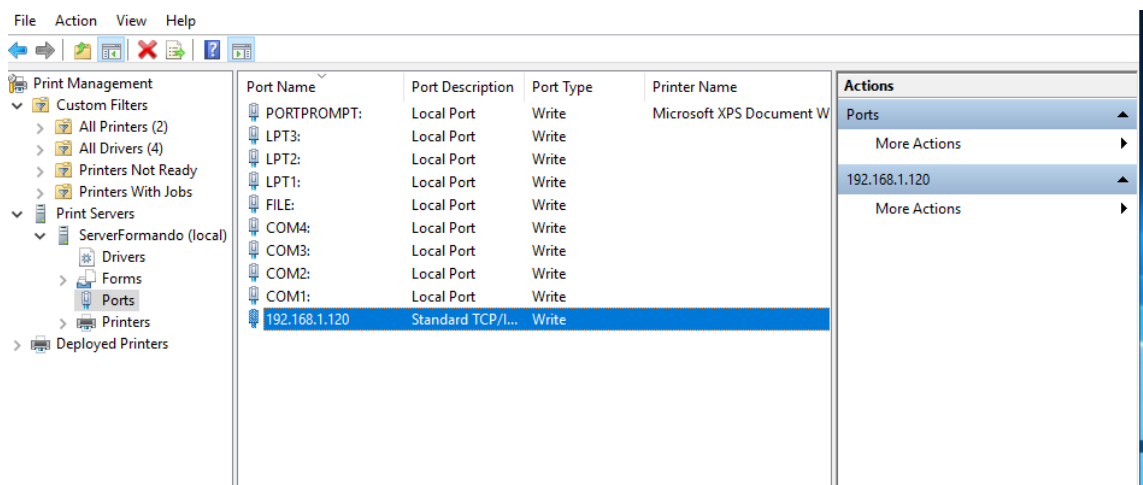


De seguida instalar a driver

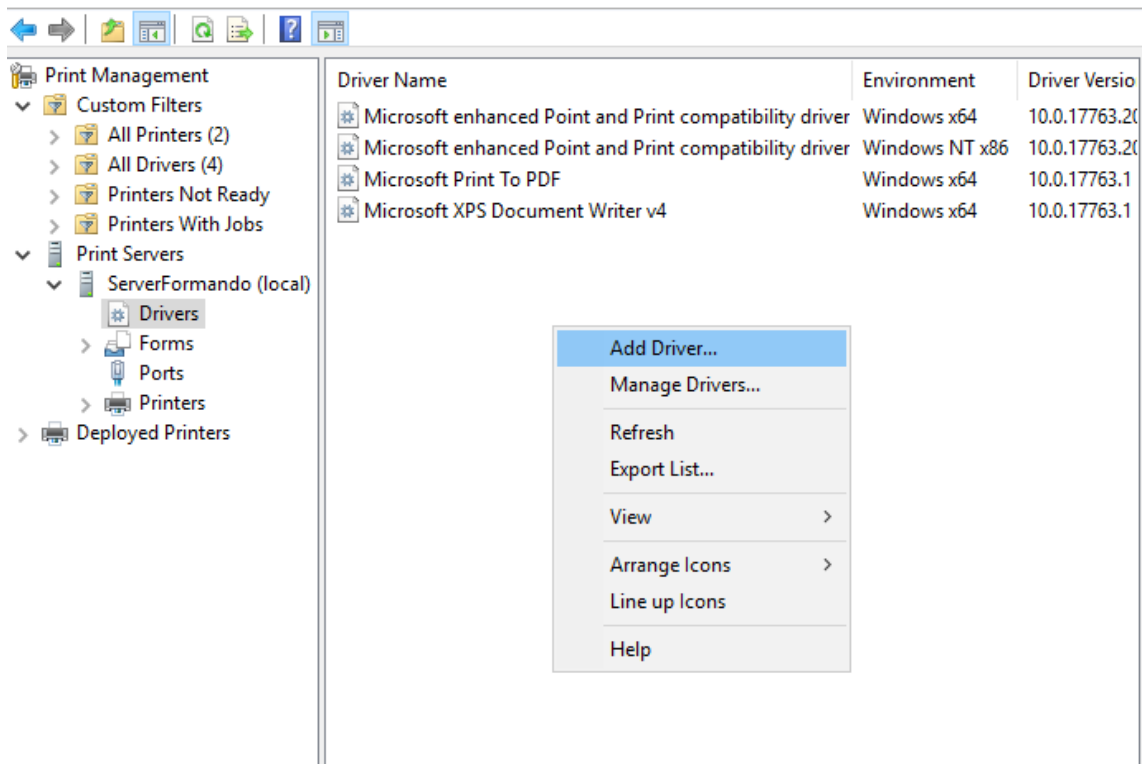




Seguir o assistente

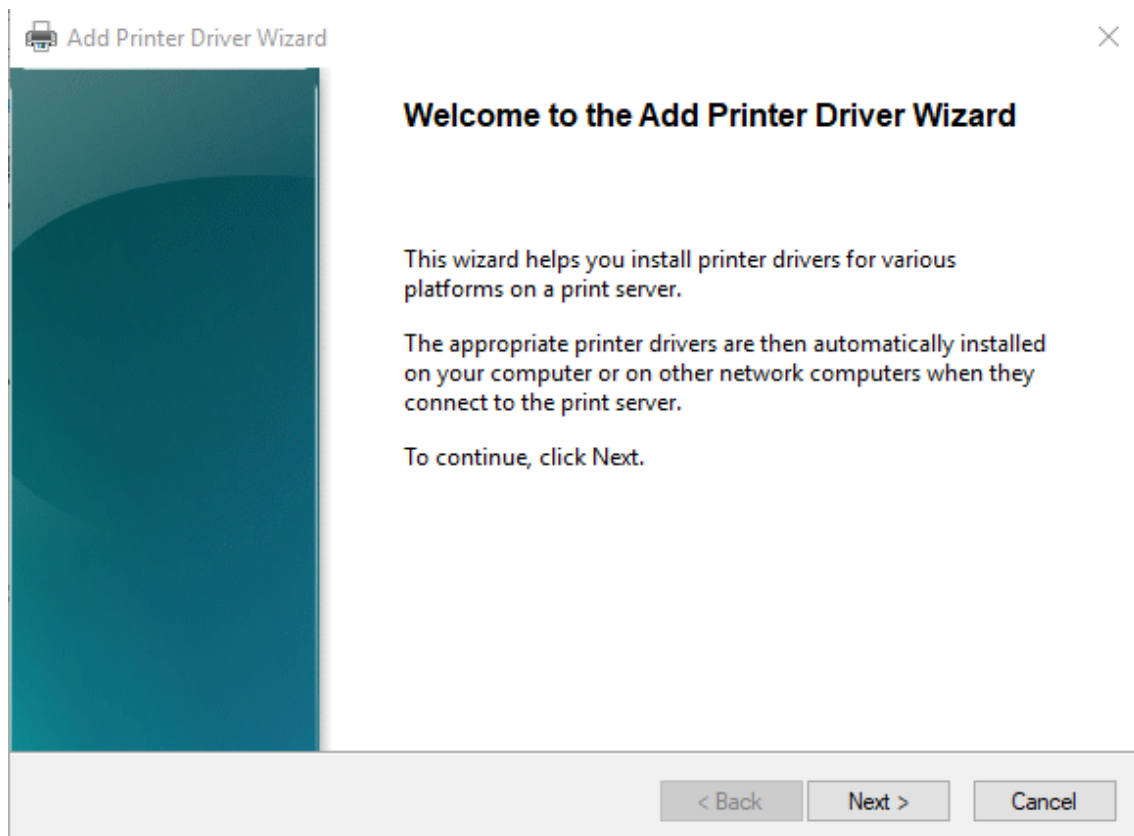



Selecionar Have Disk...

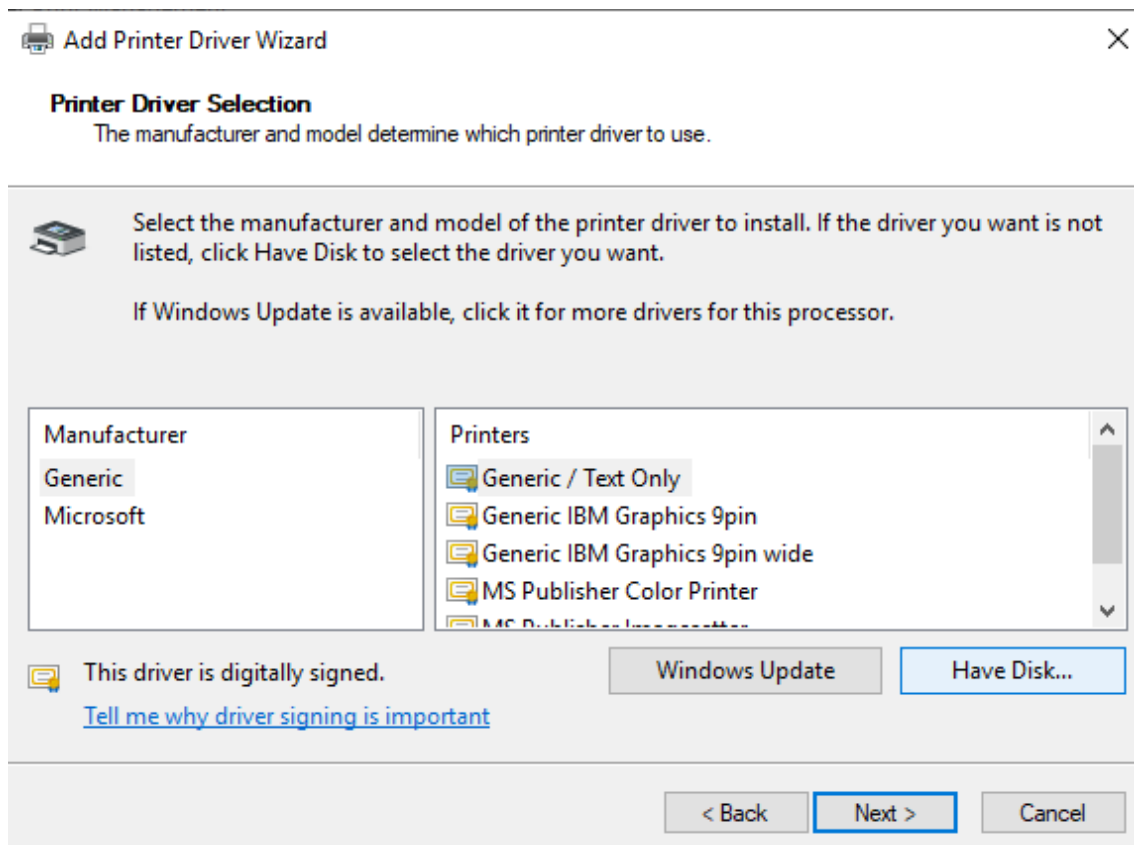


Browse:

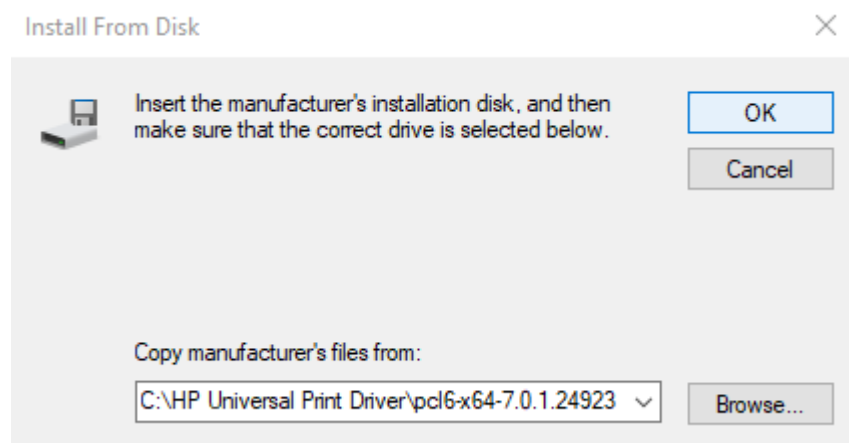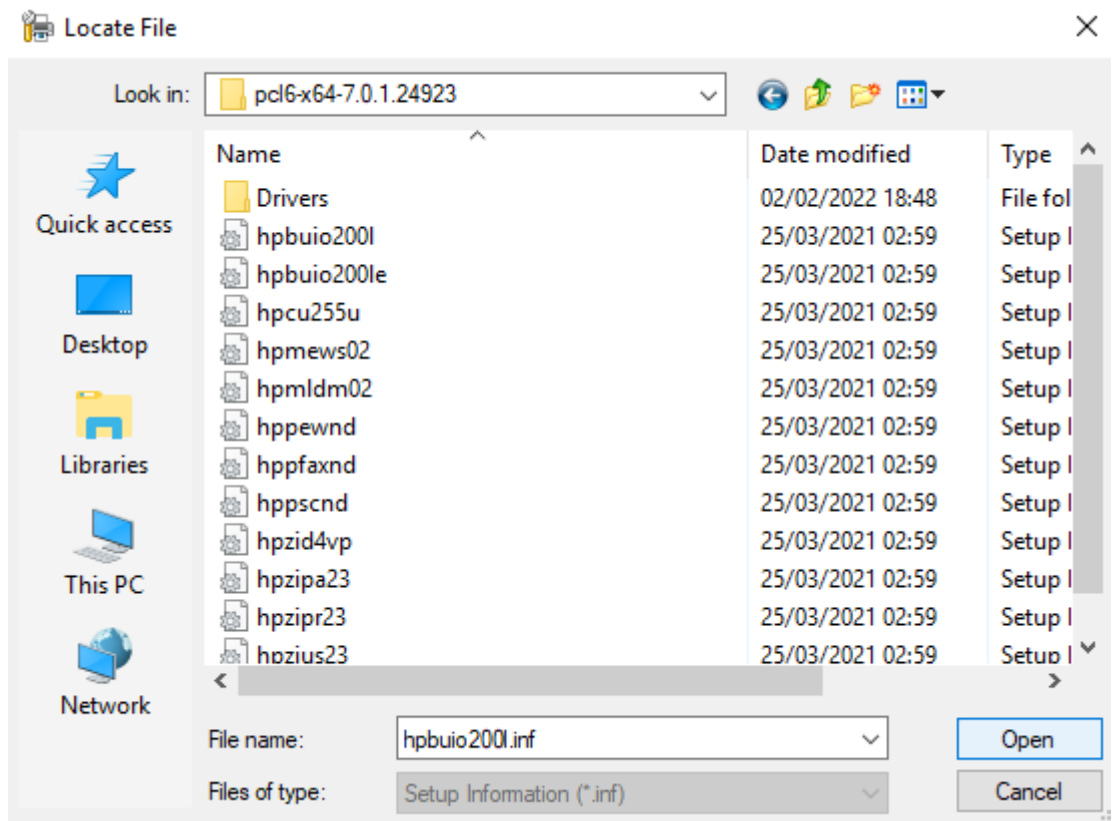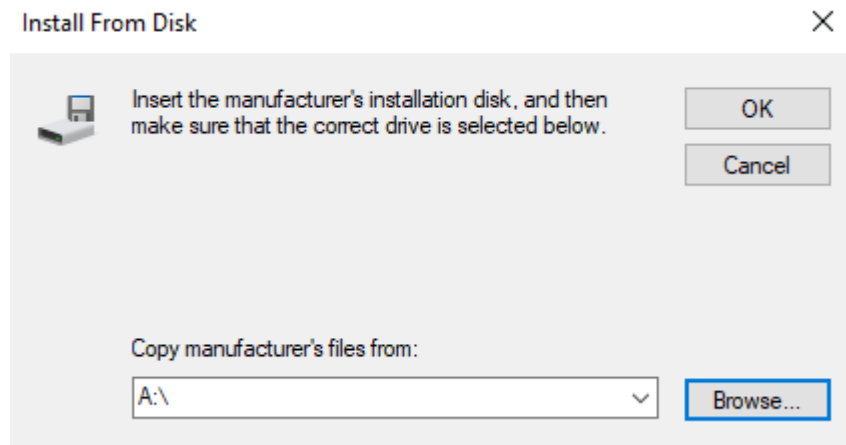


Next e Finish

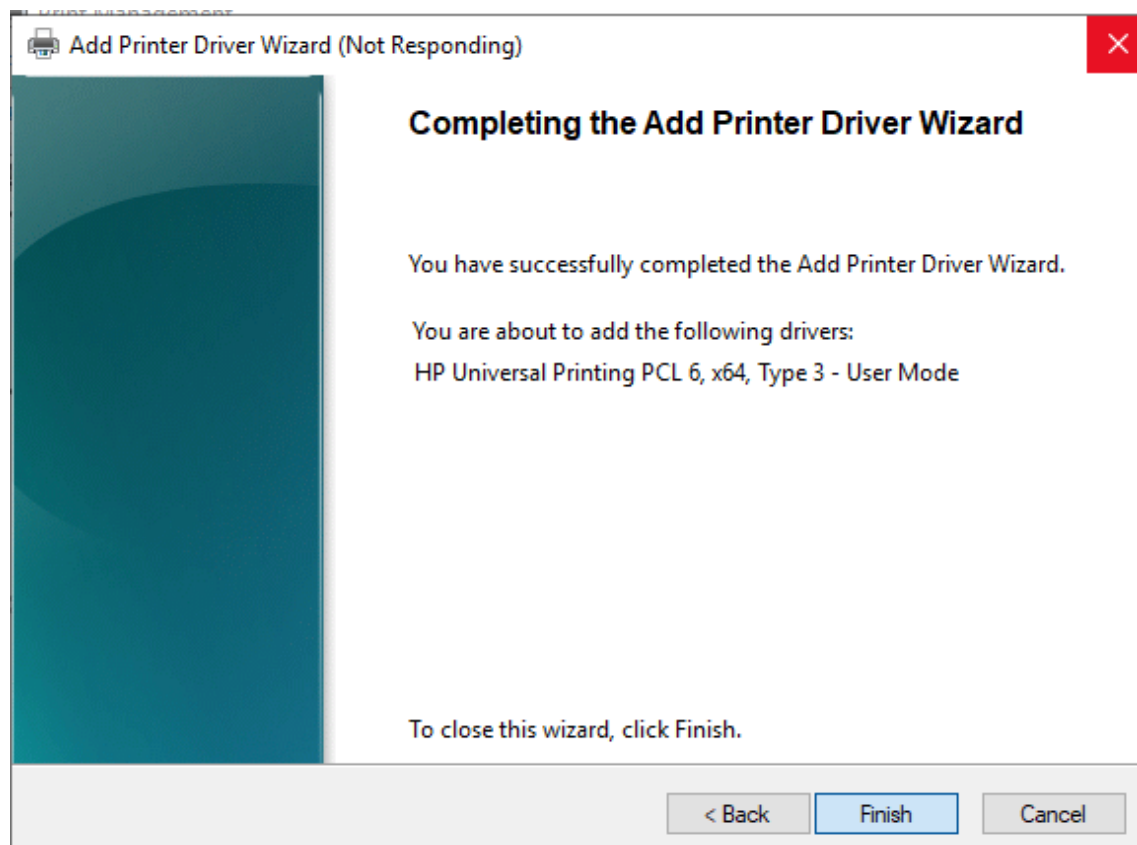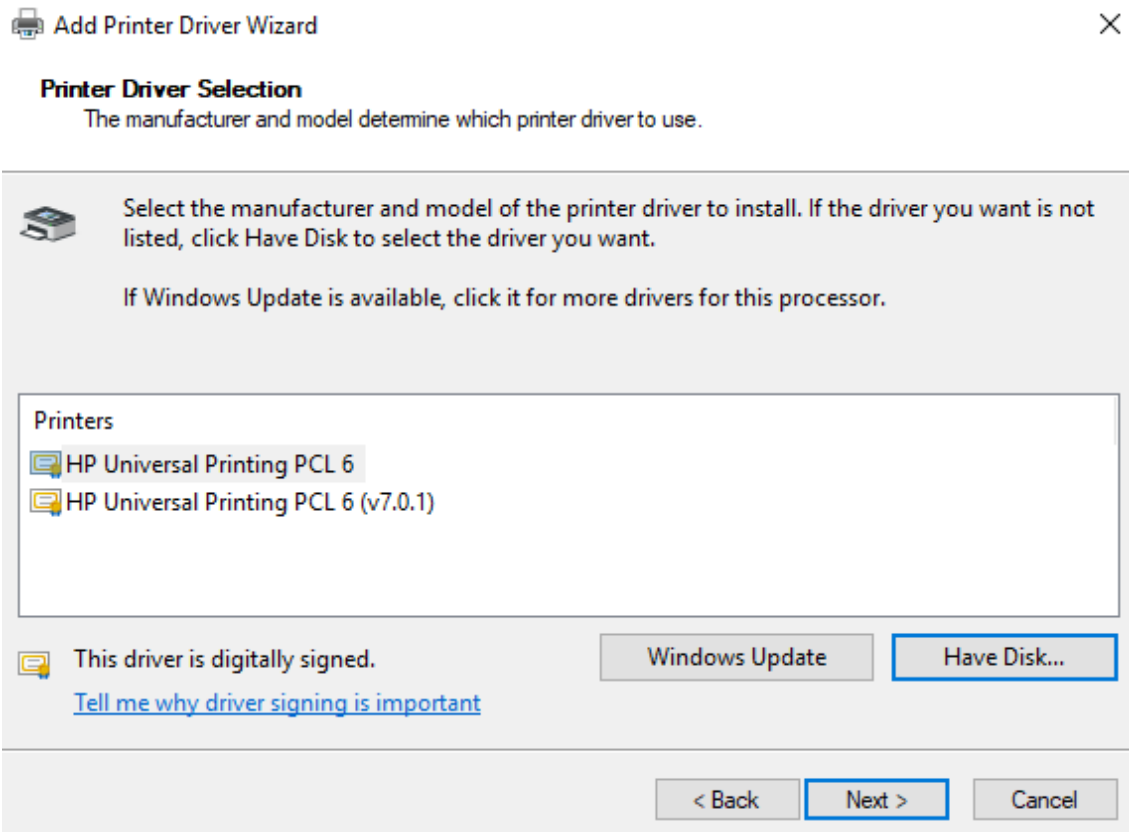

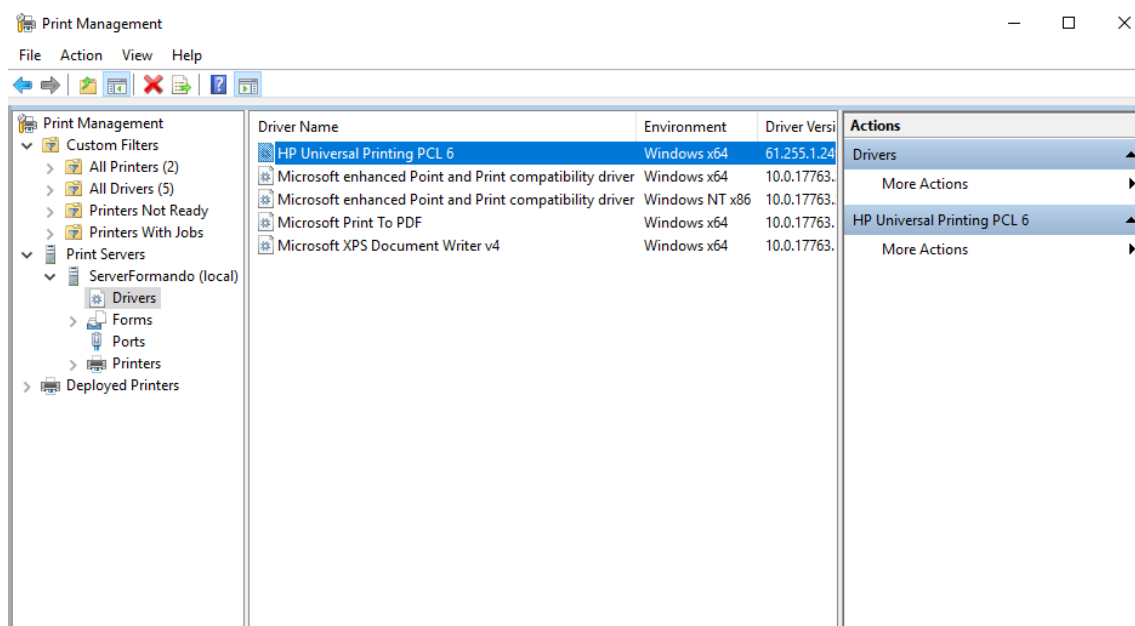


E agora a configuração da impressora:

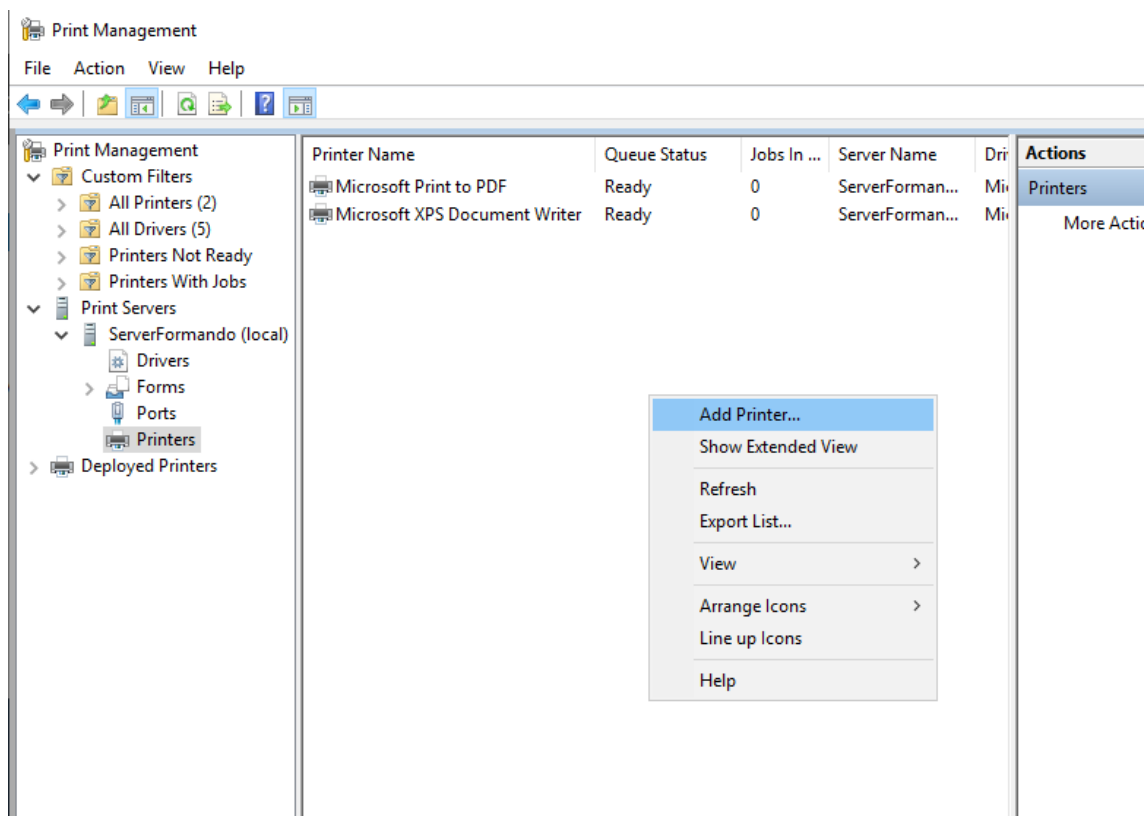

Add a new printer e selecionar o IP da impressora

 Network Printer Installation Wizard ×

Printer Installation
Pick an installation method.

☐ Search the network for printers

☐ Add a TCP/IP or Web Services Printer by IP address or hostname


☒ Add a new printer using an existing port:

☐ Create a new port and add a new printer:

LPT1: (Printer Port) ▾

LPT1: (Printer Port)
LPT2: (Printer Port)
LPT3: (Printer Port)
COM1: (Serial Port)
COM2: (Serial Port)
COM3: (Serial Port)
COM4: (Serial Port)
FILE: (Print to File)
192.168.1.120 (Standard TCP/IP Port)
PORTPROMPT: (Local Port)

< Back Next > Cancel

 Network Printer Installation Wizard ×

Printer Driver
Pick a driver for the new printer.

☐ Use the printer driver that the wizard selected

Compatible driver cannot be found.

☒ Use an existing printer driver on the computer

HP Universal Printing PCL 6 ▾

☐ Install a new driver

< Back Next > Cancel



Network Printer Installation Wizard



Printer Name and Sharing Settings

You can give the printer a friendly name and specify whether other people can use the printer.

Printer Name:

Impressora Piso 1

☒ Share this printer

Share Name:

HP Universal Printing PCL 6

Location:

Piso 1

Comment:

< Back

Next >

Cancel



Network Printer Installation Wizard



Completing the Network Printer Installation Wizard


Status:

Installing printer...



< Back

Finish


Cancel

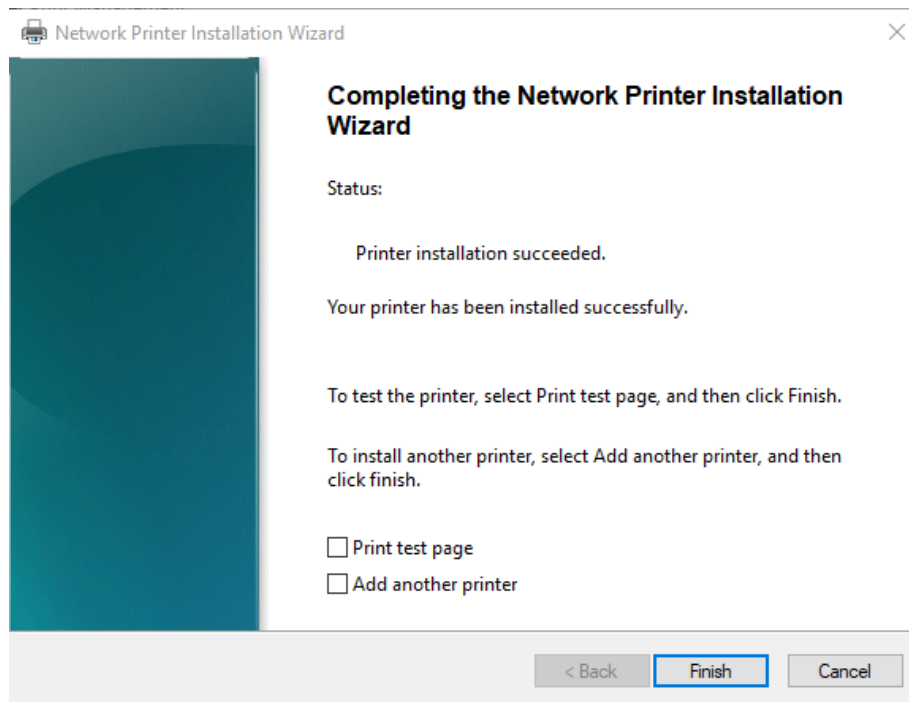


A impressora já está configurada

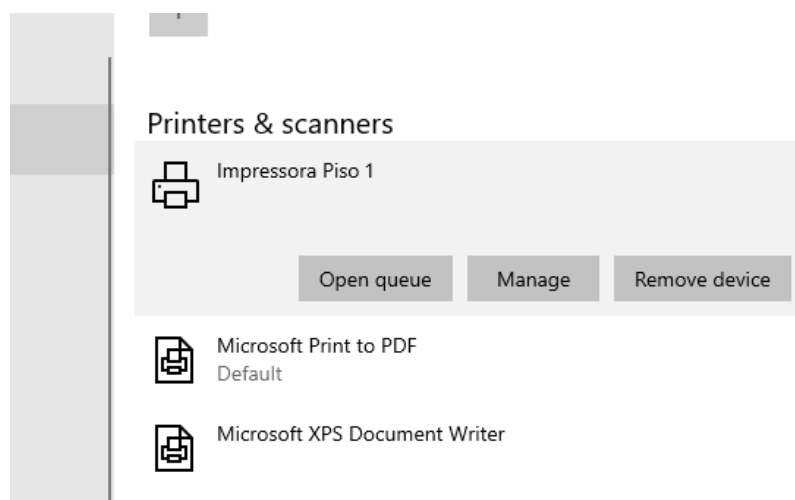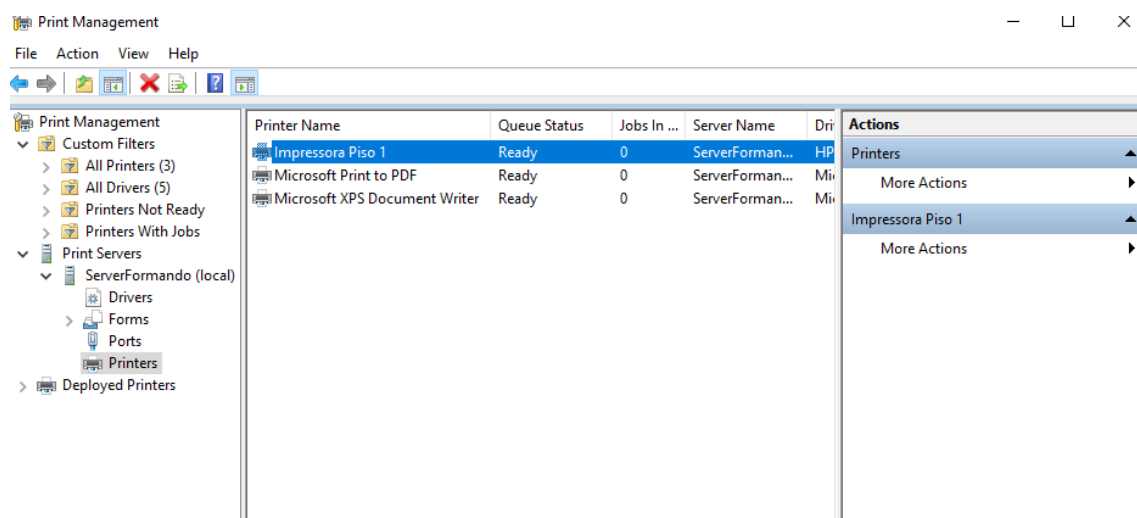

Para a impressora ficar activa no Active Directory:

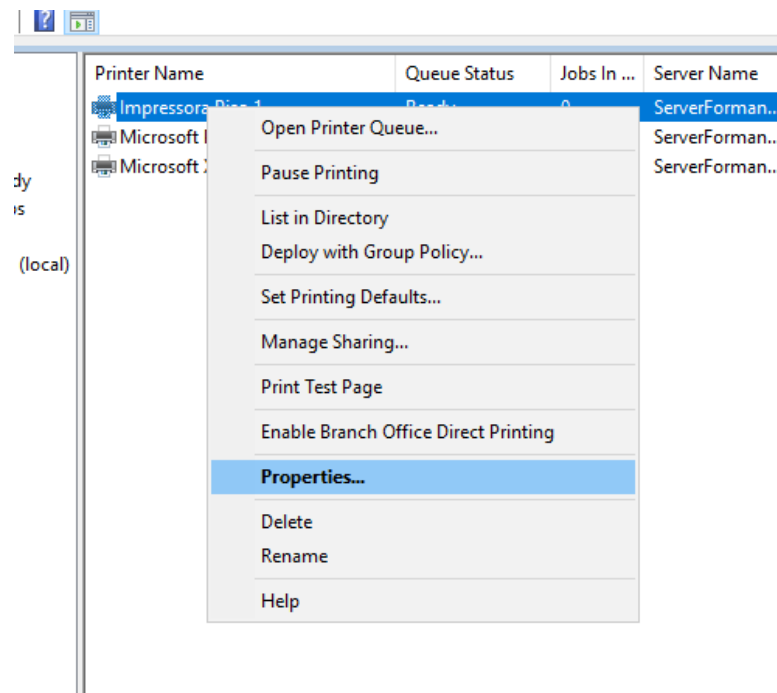

Selecionar List in the directory

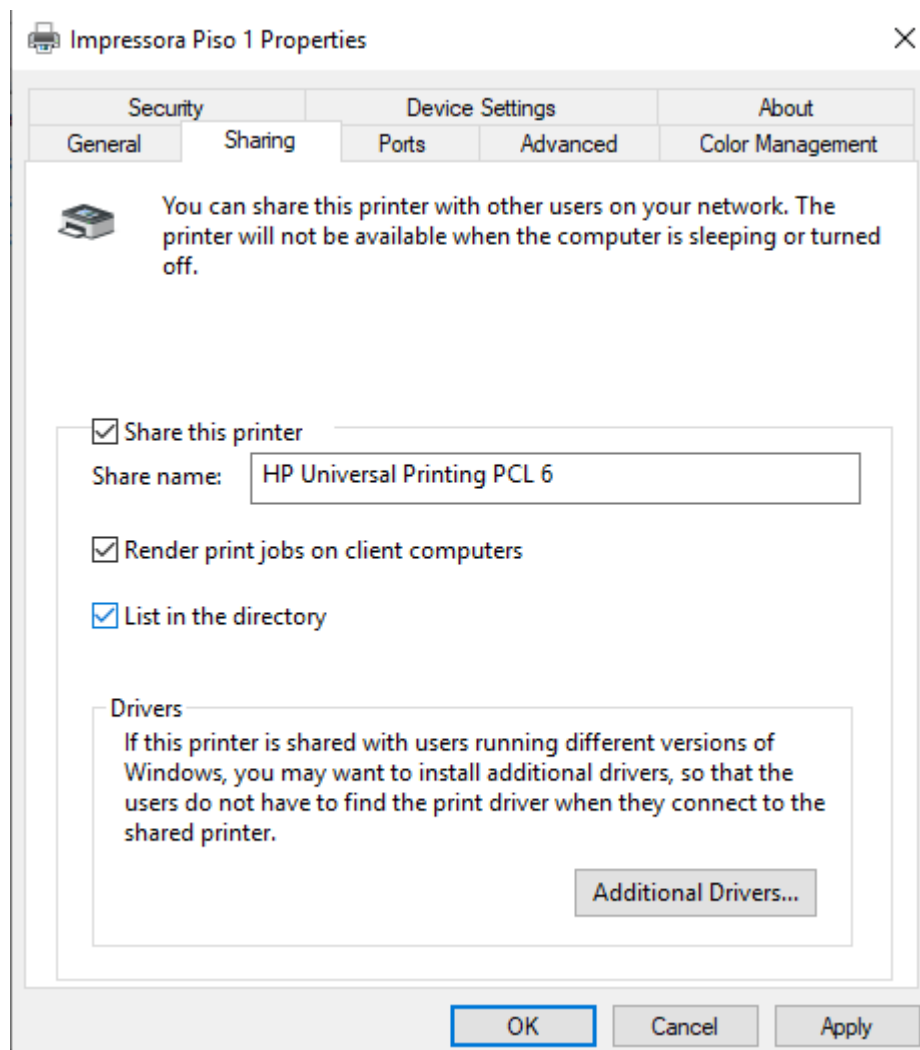

Selecionar Enable printer pooling para poder selecionar mais do que uma impressora

